



A. Line layout models 123.1, 123.02/03

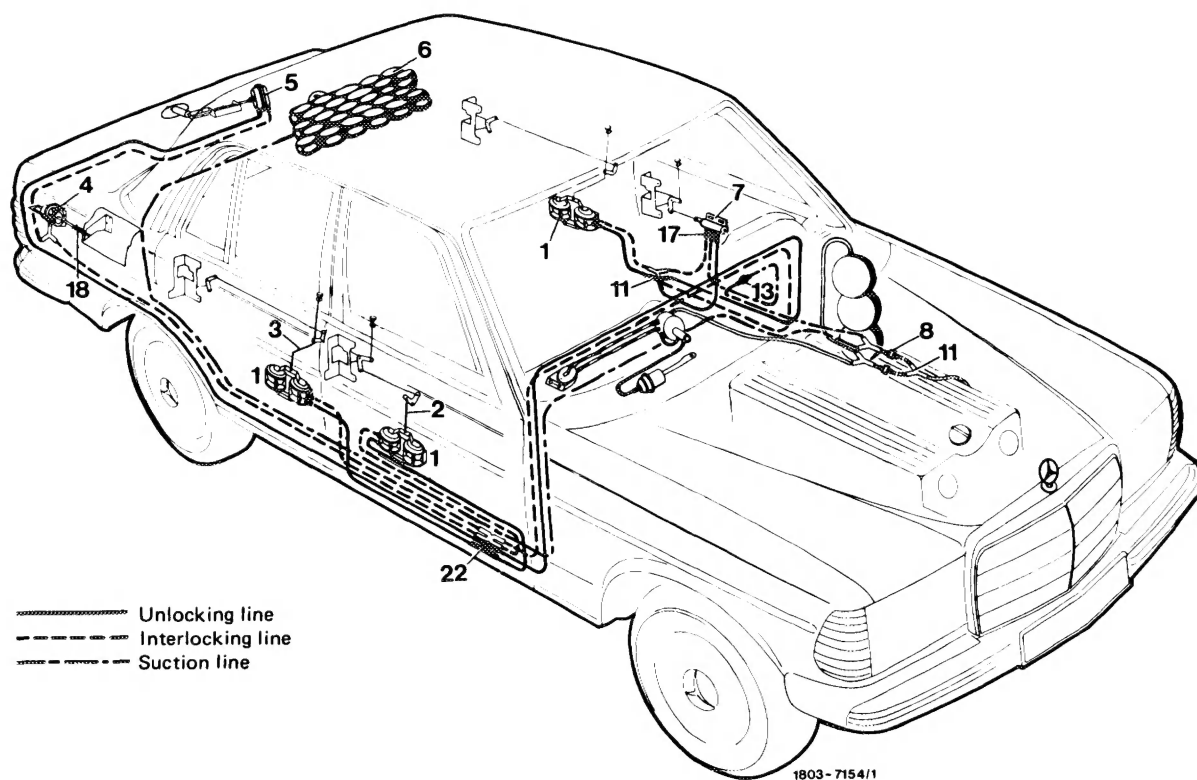

- 1 Vacuum element (driver's and rear doors)
- 2 Control rod (front passenger door)
- 3 Control rod (rear doors)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (trunk lid)
- 6 Vacuum supply tank
- 7 Vacuum switch
- 8 Check valve

- 11 Three-way distributor
- 13 Check valve
- 17 Connection
- 18 Compression spring
- 22 Four-way distributor


B. Circuit diagram models 123.02/03

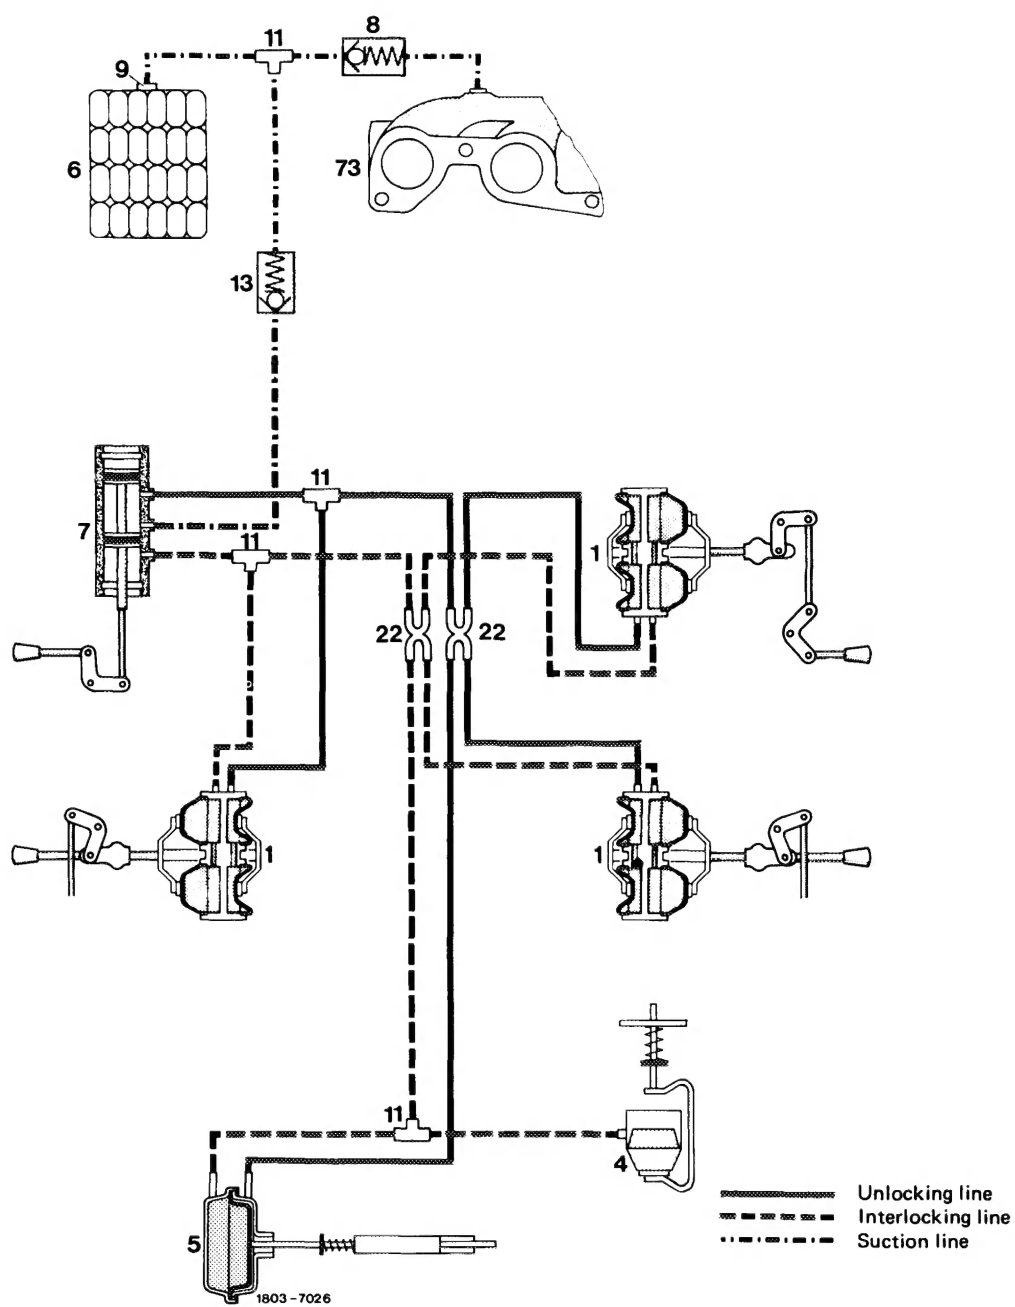


- 1 Vacuum element (driver's and rear doors)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (trunk lid)
- 6 Vacuum supply tank
- 7 Vacuum switch
- 8 Check valve

- 9 Seal
- 11 Three-way distributor
- 13 Check valve
- 22 Four-way distributor
- 73 Suction pipe

80.4-900/3 F 2

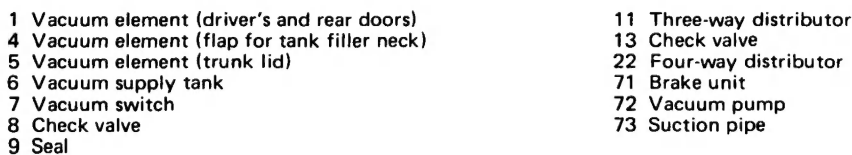


F. Line installation models 123.08/09, 123.183/190

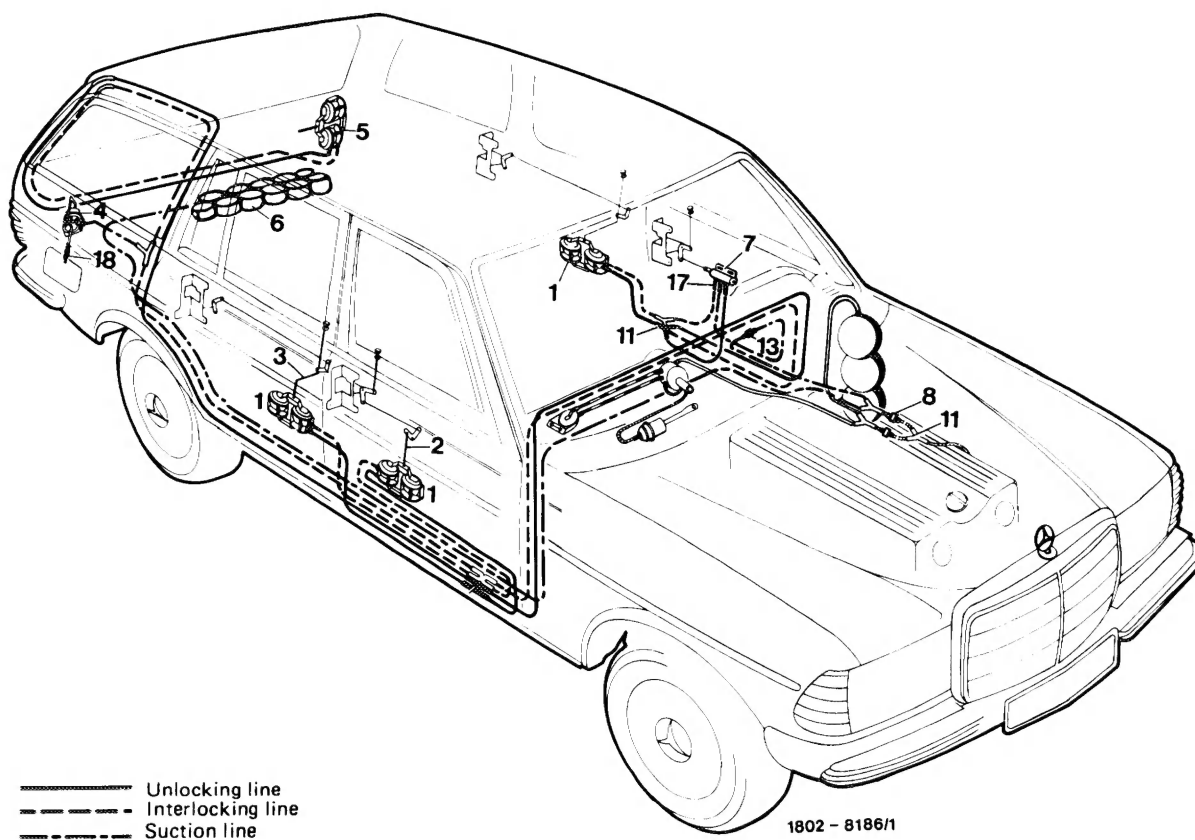

- 1 Vacuum element (driver's and rear doors)
- 2 Control rod (front passenger door)
- 3 Control rod (rear doors)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (rear door)
- 6 Vacuum reservoir

- 7 Vacuum switch
- 8 Check valve
- 11 Three-way distributor
- 13 Check valve
- 17 Connection
- 18 Compression spring

H. Wiring diagram models 123.183/190

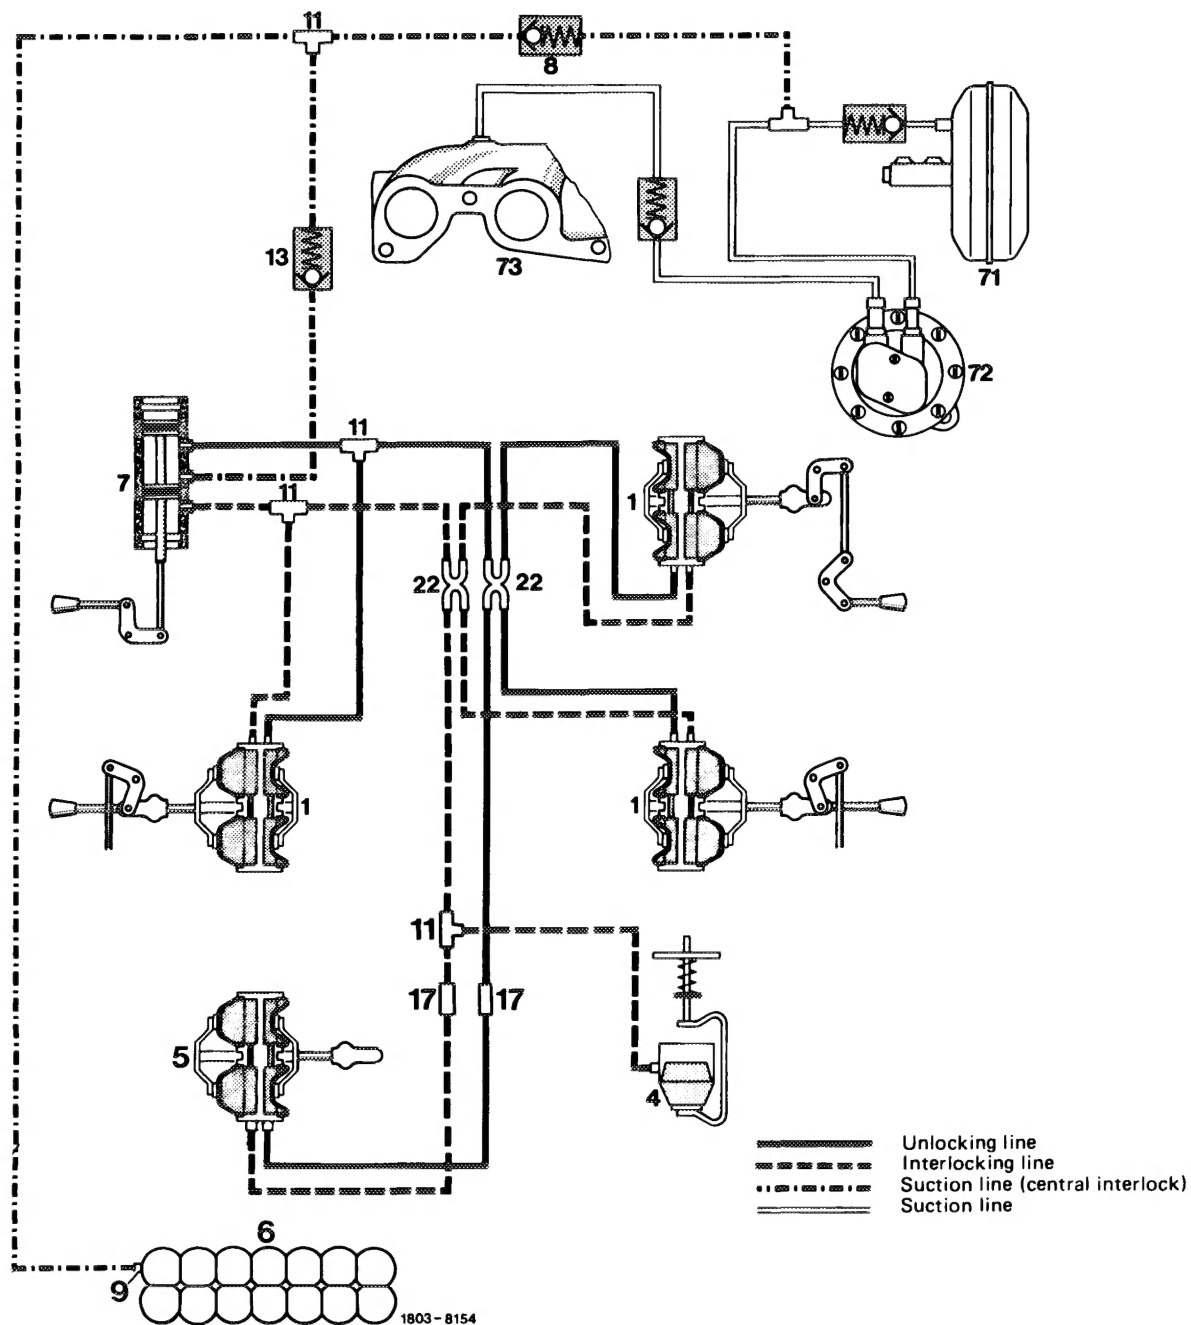

- | | |
|--|--------------------------|
| 1 Vacuum element (driver's and rear doors) | 11 Three-way distributor |
| 4 Vacuum element (flap for tank filler neck) | 13 Check valve |
| 5 Vacuum element (rear door) | 17 Connection |
| 6 Vacuum reservoir | 22 Four-way distributor |
| 7 Vacuum switch | 71 Braking unit |
| 8 Check valve | 72 Vacuum pump |
| 9 Sealing | 73 Intake pipe |